


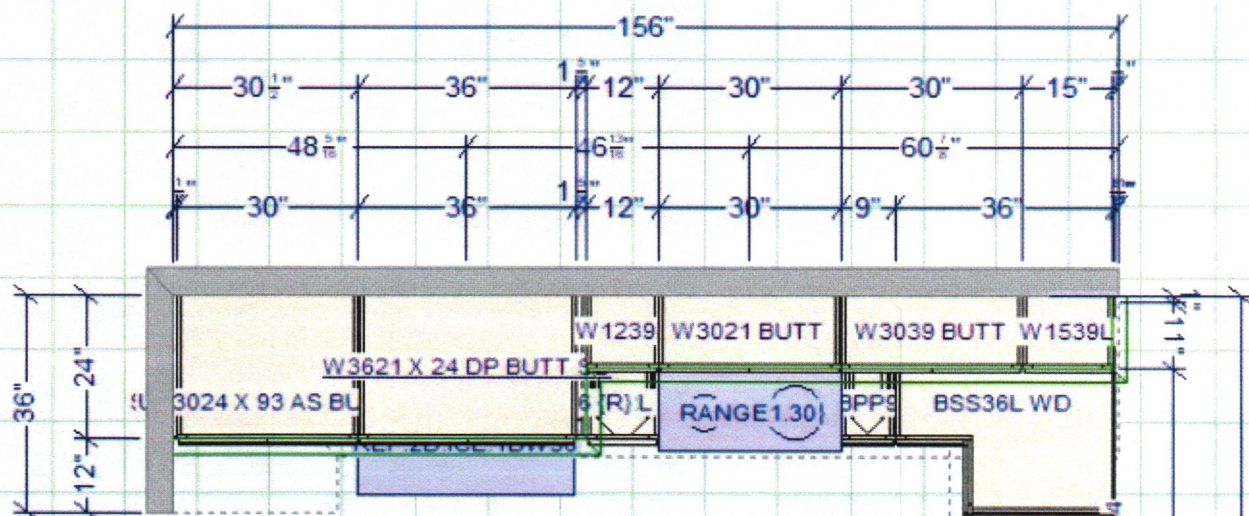

Rip 3" solid stock in half to make mounting strip for crown molding (see molding profile)

Build Base for wall cabinets to sit on 4 3/8" tall

Attach panel to end to cove the seams between W2430 and B45

10"-12" over hang



Attach panel then fuax door front on left side of B39

Attach panel then fuax door and drawer fronts on end of B45

Attach panel then fuax door and drawer fronts on right side of B39

Build out toe kick to be flush with face frame of cabinets.
Use 4 1/4" baseboard around the island. flush base board with face frame and use quarterround to cover gap between base board and floor.

use 3/8 of 1/2 plywood for back of cabinet. cover with finished panel. Use batten molding to cover seams, and corner molding to cover panel and plywood and the end of the run.

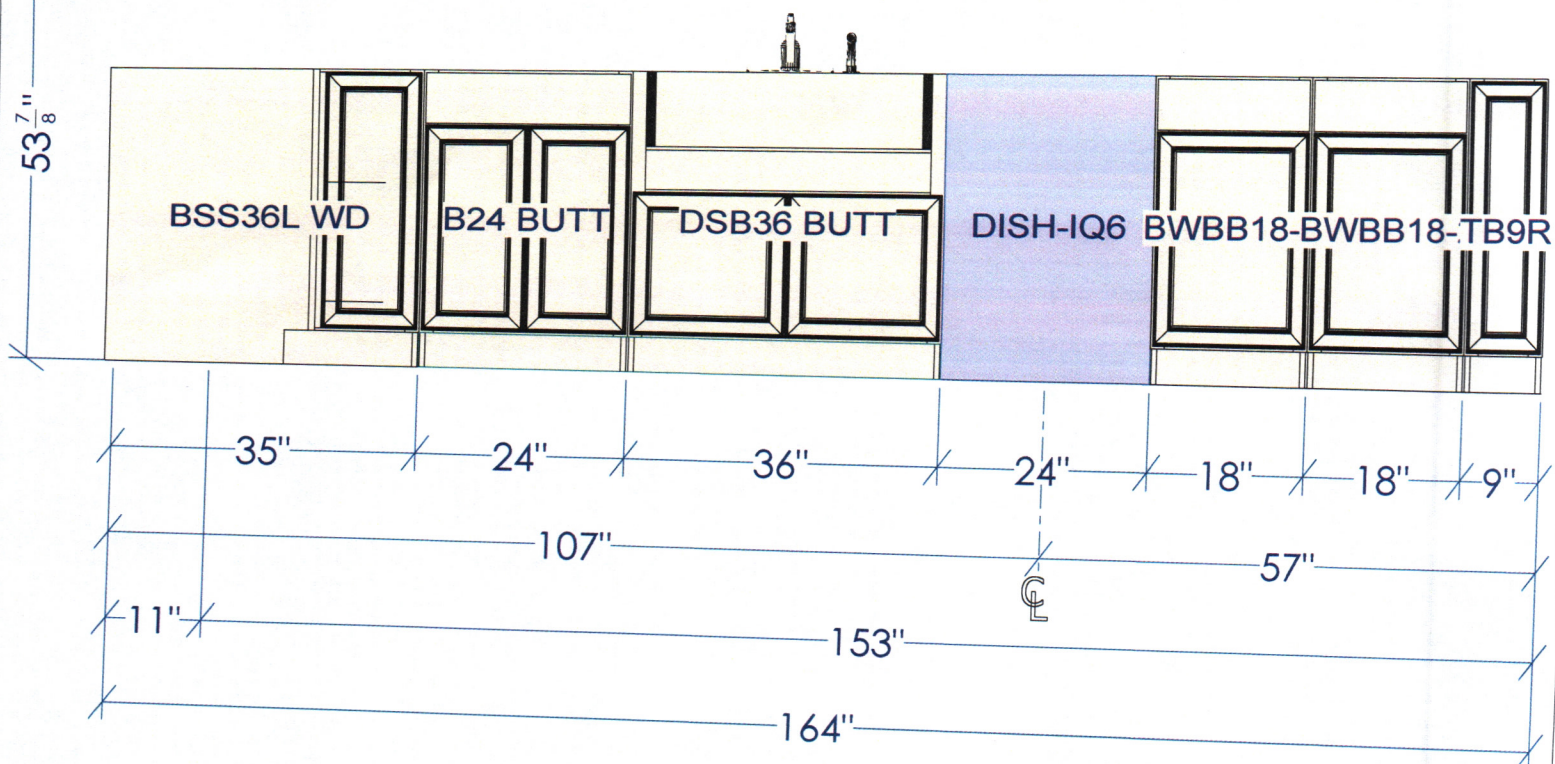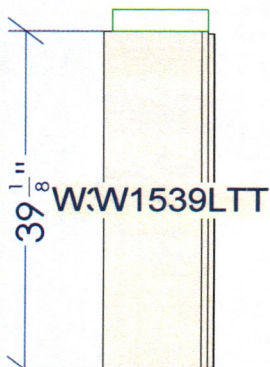

All dimensions size designations given are subject to verification on job site and adjustment to fit job conditions.

2020

This is an original design and must not be released or copied unless applicable fee has been paid or job order placed.

Designed: 12/5/2021
Printed: 12/11/2021

BM2 JacksonAlison

EI 2

Drawing #: 1 No Scale.

